

Creative MovieMaker

User Guide
On-line Version

Getting Started

Video Blaster MovieMaker

Information in this document is subject to change without notice and does not represent a commitment on the part of Creative Technology Ltd. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the written permission of Creative Technology Ltd. The software described in this document is furnished under a license agreement and may be used or copied only in accordance with the terms of the license agreement. It is against the law to copy the software on any other medium except as specifically allowed in the license agreement. The licensee may make one copy of the software for backup purposes.

Copyright © 2000 by Creative Technology Ltd. All rights reserved.

Version 1.0

November 2000

Video Blaster and Sound Blaster are registered trademarks of Creative Technology, Ltd. Blaster and LAVA! are trademarks of Creative Technology Ltd.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Pentium is a registered trademark of Intel Corporation.

All other brand and product names listed are trademarks or registered trademarks of their respective holders.

All specifications subject to change without prior notice. Use of this product is subject to the limited warranty. Actual contents may differ slightly from those pictured.

This product is designed to assist you in reproducing material for which you own the copyright or are authorized to copy by the copyright owner or by exemption in applicable law. Unless you own the copyright or have such authorization, you may be violating copyright law and may be subject to payment of damages and other remedies. If you are uncertain about your rights, you should contact your legal advisor.

Creative End-User Software License Agreement

Version 2.4, June 2000

PLEASE READ THIS DOCUMENT CAREFULLY BEFORE INSTALLING THE SOFTWARE. BY INSTALLING AND USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THE AGREEMENT, DO NOT INSTALL OR USE THE SOFTWARE. PROMPTLY RETURN, WITHIN 15 DAYS, THE SOFTWARE, ALL RELATED DOCUMENTATION AND ACCOMPANYING ITEMS TO THE PLACE OF ACQUISITION FOR A FULL REFUND.

This is a legal agreement between you and **Creative Technology Ltd.** and its subsidiaries ("Creative"). This Agreement states the terms and conditions upon which Creative offers to license the software sealed in the disk package together with all related documentation and accompanying items including, but not limited to, the executable programs, drivers, libraries and data files associated with such programs (collectively, the "Software").

LICENSE

1. Grant of License

The Software is licensed, not sold, to you for use only under the terms of this Agreement. You own the disk or other media on which the Software is originally or subsequently recorded or fixed; but, as between you and Creative (and, to the extent applicable, its licensors), Creative retains all title to and ownership of the Software and reserves all rights not expressly granted to you.

2. For Use on a Single Computer

The Software may be used only on a single computer by a single user at any time. You may transfer the machine-readable portion of the Software from one computer to another computer, provided that (a) the Software (including any portion or copy thereof) is erased from the first computer and (b) there is no possibility that the Software will be used on more than one computer at a time.

3. Stand-Alone Basis

You may use the Software only on a stand-alone basis, such that the Software and the functions it provides are accessible only to persons who are physically present at the location of the computer on which the Software is loaded. You may not allow the Software or its functions to be accessed remotely, or transmit all or any portion of the Software through any network or communication line.

4. Copyright

The Software is owned by Creative and/or its licensees and is protected by United States copyright laws and international treaty provisions. You may not remove the copyright notice from any copy of the Software or any copy of the written materials, if any, accompanying the Software.

5. One Archival Copy

You may make one (1) archival copy of the machine-readable portion of the Software for backup purposes only in support of your use of the Software on a single computer, provided that you reproduce on the copy all copyright and other proprietary rights notices included on the originals of the Software.

6. No Merger or Integration

You may not merge any portion of the Software into, or integrate any portion of the Software with, any other program, except to the extent expressly permitted by the laws of the jurisdiction where you are located. Any portion of the Software merged into or integrated with another program, if any, will continue to be subject to the terms and conditions of this Agreement, and you must reproduce on the merged or integrated portion all copyright and other proprietary rights notices included in the originals of the Software.

7. Network Version

If you have purchased a "network" version of the Software, this Agreement applies to the installation of the Software on a single "file server". It may not be copied onto multiple systems. Each "node" connected to the "file server" must also have its own license of a "node copy" of the Software, which becomes a license only for that specific "node".

8. Transfer of License

You may transfer your license of the Software, provided that (a) you transfer all portions of the Software or copies thereof, (b) you do not retain any portion of the Software or any copy thereof, and (c) the transferee reads and agrees to be bound by the terms and conditions of this Agreement.

9. Limitations on Using, Copying, and Modifying the Software

Except to the extent expressly permitted by this Agreement or by the laws of the jurisdiction where you acquired the Software, you may not use, copy or modify the Software. Nor may you sublicense any of your rights under this Agreement. You may use the Software for your personal use only, and not for public performance or for the creation of publicly displayed videotapes.

10. Decompiling, Disassembling, or Reverse Engineering

You acknowledge that the Software contains trade secrets and other proprietary information of Creative and its licensors. Except to the extent expressly permitted by this Agreement or by the laws of the jurisdiction where you are located, you may not decompile, disassemble or otherwise reverse engineer the Software, or engage in any other activities to obtain underlying information that is not visible to the user in connection with normal use of the Software.

11. For Software with CDDB features

This package contains software from CDDB, Inc. of Berkeley California ("CDDB"). The software from CDDB (the "CDDB Client") enables this application to do online disc identification and obtain music-related information, including name, artist, track and title information ("CDDB Data") from online servers ("CDDB

Servers") and to perform other functions.

You agree that you will use CDDB Data, the CDDB Client and CDDB Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the CDDB Client or any CDDB Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT CDDB DATA, THE CDDB CLIENT, OR CDDB SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the CDDB Data, the CDDB Client and CDDB Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the CDDB Data, the CDDB Client and CDDB Servers. CDDB reserves all rights in CDDB Data, the CDDB Client and the CDDB Servers, including all ownership rights. You agree that CDDB, Inc. may enforce its rights under this Agreement against you directly in its own name.

The CDDB Client and each item of CDDB Data are licensed to you "AS IS." CDDB makes no representations or warranties, express or implied, regarding the accuracy of any CDDB Data from in the CDDB Servers. CDDB reserves the right to delete data from the CDDB Servers or to change data categories for any cause that CDDB deems sufficient. No warranty is made that the CDDB Client or CDDB Servers are error-free or that functioning of CDDB Client or CDDB Servers will be uninterrupted. CDDB is not obligated to provide you with any new enhanced or additional data types or categories that CDDB may choose to provide in the future.

CDDB DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. CDDB does not warrant the results that will be obtained by your use of the CDDB Client or any CDDB Server. IN NO CASE WILL CDDB BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS, OR LOST REVENUES.

In particular, you agree not for any purpose to transmit the Software or display the Software's object code on any computer screen or to make any hardcopy memory dumps of the Software's object code. If you believe you require information related to the interoperability of the Software with other programs, you shall not decompile or disassemble the Software to obtain such information, and you agree to request such information from Creative at the address listed below. Upon receiving such a request, Creative shall

1. determine whether you require such information for a legitimate purpose and, if so, Creative will provide such information to you within a reasonable time and on reasonable conditions. In any event, you will notify Creative of any information derived from reverse engineering or such other activities, and the results thereof will constitute the confidential information of Creative that may be used only in connection with the Software.

TERMINATION

The license granted to you is effective until terminated. You may terminate it at any time by returning the Software (including any portions or copies thereof) to Creative. The license will also terminate automatically without any notice from Creative if you fail to comply with any term or condition of this Agreement. You agree upon such termination to return the Software (including any portions or copies thereof) to Creative. Upon termination, Creative may also enforce any rights provided by law. The provisions of this Agreement that protect the proprietary rights of Creative will continue in force after termination.

LIMITED WARRANTY

Creative warrants, as the sole warranty, that the disks on which the Software is furnished will be free of defects, as set forth in the Warranty Card or printed manual included with the Software. No distributor, dealer or any other entity or person is authorized to expand or alter this warranty or any other provisions of this Agreement. Any representation, other than the warranties set forth in this Agreement, will not bind Creative.

Creative does not warrant that the functions contained in the Software will meet your requirements or that the operation of the Software will be uninterrupted, error-free or free from malicious code. For purposes of this paragraph, "malicious code" means any program code designed to contaminate other computer programs or computer data, consume computer resources, modify, destroy, record, or transmit data, or in some other fashion usurp the normal operation of the computer, computer system, or computer network, including viruses, Trojan horses, droppers, worms, logic bombs, and the like. **EXCEPT AS STATED ABOVE IN THIS AGREEMENT, THE SOFTWARE IS PROVIDED AS-IS WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. CREATIVE IS NOT OBLIGATED TO PROVIDE ANY UPDATES, UPGRADES OR TECHNICAL SUPPORT FOR THE SOFTWARE.**

Further, Creative shall not be liable for the accuracy of any information provided by Creative or third party technical support personnel, or any damages caused, either directly or indirectly, by acts taken or omissions made by you as a result of such technical support.

You assume full responsibility for the selection of the Software to achieve your intended results, and for the installation, use and results

obtained from the Software. You also assume the entire risk as it applies to the quality and performance of the Software. Should the Software prove defective, you (and not Creative, or its distributors or dealers) assume the entire cost of all necessary servicing, repair or correction.

This warranty gives you specific legal rights, and you may also have other rights which vary from country/state to country/state. Some countries/states do not allow the exclusion of implied warranties, so the above exclusion may not apply to you. Creative disclaims all warranties of any kind if the Software was customized, repackaged or altered in any way by any third party other than Creative.

**LIMITATION OF REMEDIES AND DAMAGES
THE ONLY REMEDY FOR BREACH OF WARRANTY WILL BE THAT SET FORTH IN THE WARRANTY CARD OR PRINTED MANUAL INCLUDED WITH THE SOFTWARE. IN NO EVENT WILL CREATIVE OR ITS LICENSORS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OR FOR ANY LOST PROFITS, LOST SAVINGS, LOST REVENUES OR LOST DATA ARISING FROM OR RELATING TO THE SOFTWARE OR THIS AGREEMENT, EVEN IF CREATIVE OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL CREATIVE'S LIABILITY OR DAMAGES TO YOU OR ANY OTHER PERSON EVER EXCEED THE AMOUNT PAID BY YOU TO USE THE SOFTWARE, REGARDLESS OF THE FORM OF THE CLAIM.**

Some countries/states do not allow the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

PRODUCT RETURNS

If you must ship the software to Creative or an authorized Creative distributor or dealer, you must prepay shipping and either insure the software or assume all risk of loss or damage in transit.

U.S. GOVERNMENT RESTRICTED RIGHTS

All Software and related documentation are provided with restricted rights. Use, duplication or disclosure by the U.S. Government is subject to restrictions as set forth in subdivision (b)(3)(ii) of the Rights in Technical Data and Computer Software Clause at 252.227-7013. If you are sub-licensing or using the Software outside of the United States, you will comply with the applicable local laws of your country, U.S. export control law, and the English version of this Agreement.

CONTRACTOR/MANUFACTURER

The Contractor/Manufacturer for the Software is:

Creative Technology Ltd
31, International Business Park
Creative Resource
Singapore 609921

GENERAL

This Agreement is binding on you as well as your employees, employers, contractors and agents, and on any successors and assignees. Neither the Software nor any information derived therefrom may be exported except in accordance with the laws of the U.S. or other applicable provisions. This Agreement is governed by the laws of the State of California (except to the extent federal law governs copyrights and federally registered trademarks). This Agreement is the entire agreement between us and supersedes any other understandings or agreements, including, but not limited to, advertising, with respect to the Software. If any provision of this Agreement is deemed invalid or unenforceable by any country or government agency having jurisdiction, that particular provision will be deemed modified to the extent necessary to make the provision valid and enforceable, and the remaining provisions will remain in full force and effect.

For questions concerning this Agreement, please contact Creative at the address stated above. For questions on product or technical matters, contact the Creative technical support center nearest you.

ADDENDUM TO THE MICROSOFT SOFTWARE LICENSE AGREEMENT (WINDOWS 95)

IMPORTANT: By using the Microsoft software files (the "Microsoft Software") provided with this Addendum, you are agreeing to be bound by the following terms. If you do not agree to be bound by these terms, you may not use the Microsoft Software.

The Microsoft Software is provided for the sole purpose of replacing the corresponding files provided with a previously licensed copy of the Microsoft software product identified above ("ORIGINAL PRODUCT"). Upon installation, the Microsoft Software files become part of the ORIGINAL PRODUCT and are subject to the same warranty and license terms and conditions as the ORIGINAL PRODUCT. If you do not have a valid license to use the ORIGINAL PRODUCT, you may not use the Microsoft Software. Any other use of the Microsoft Software is prohibited.

SPECIAL PROVISIONS APPLICABLE TO THE EUROPEAN UNION

IF YOU ACQUIRED THE SOFTWARE IN THE EUROPEAN UNION (EU), THE FOLLOWING PROVISIONS ALSO APPLY TO YOU. IF THERE IS ANY INCONSISTENCY BETWEEN THE TERMS OF THE SOFTWARE LICENSE AGREEMENT SET OUT EARLIER AND IN THE FOLLOWING PROVISIONS, THE FOLLOWING PROVISIONS SHALL TAKE PRECEDENCE.

DECOMPILATION

You agree not for any purpose to transmit the Software or display the Software's object code on any computer screen or to make any hard copy memory dumps of the Software's object code. If you believe you require information related to the interoperability of the Software with other programs, you shall not decompile or disassemble the Software

to obtain such information, and you agree to request such information from Creative at the address listed earlier. Upon receiving such a request, Creative shall determine whether you require such information for a legitimate purpose and, if so, Creative will provide such information to you within a reasonable time and on reasonable conditions.

LIMITED WARRANTY

EXCEPT AS STATED EARLIER IN THIS AGREEMENT, AND AS PROVIDED UNDER THE HEADING “STATUTORY RIGHTS”, THE SOFTWARE IS PROVIDED AS-IS WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, QUALITY AND FITNESS FOR A PARTICULAR PURPOSE.

LIMITATION OF REMEDY AND DAMAGES

THE LIMITATIONS OF REMEDIES AND DAMAGES IN THE SOFTWARE LICENSE AGREEMENT SHALL NOT APPLY TO PERSONAL INJURY (INCLUDING DEATH) TO ANY PERSON CAUSED BY CREATIVE'S NEGLIGENCE AND ARE SUBJECT TO THE PROVISION SET OUT UNDER THE HEADING “STATUTORY RIGHTS”.

STATUTORY RIGHTS

Irish law provides that certain conditions and warranties may be implied in contracts for the sale of goods and in contracts for the supply of services. Such conditions and warranties are hereby excluded, to the extent such exclusion, in the context of this transaction, is lawful under Irish law. Conversely, such conditions and warranties, insofar as they may not be lawfully excluded, shall apply.

Accordingly nothing in this Agreement shall prejudice any rights that you may enjoy by virtue of Sections 12, 13, 14 or 15 of the Irish Sale of Goods Act 1893 (as amended).

GENERAL

This Agreement is governed by the laws of the Republic of Ireland. The local language version of this agreement shall apply to Software acquired in the EU. This Agreement is the entire agreement between us, and you agree that Creative will not have any liability for any untrue statement or representation made by it, its agents or anyone else (whether innocently or negligently) upon which you relied upon entering this Agreement, unless such untrue statement or representation was made fraudulently.

Safety & Regulatory Information

The following sections contain notices for various countries:

CAUTION: This device is intended to be connected by the user to a CSA/TUV/UL certified/listed IBM AT or compatible personal computers in the manufacturer's defined operator access area. Check the equipment operating/installation manual and/or with the equipment manufacturer to verify/confirm if your equipment is suitable for devices to be connected to it.

ATTENTION: Ce périphérique est destiné à être connecté par l'utilisateur à un ordinateur IBM AT certifié ou listé CSA/TUV/UL ou compatible, à l'intérieur de la zone d'accès définie par le fabricant. Consulter le mode d'emploi/guide d'installation et/ou le fabricant de l'appareil pour vérifier ou confirmer qu'il est possible de connecter d'autres périphériques à votre système.

Notice for the USA

FCC Part 15: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this notice is not a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the distance between the equipment and receiver.
- ☐ Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician.

CAUTION: To comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be installed in computer equipment certified to comply with the Class B limits.

All cables used to connect the computer and peripherals must be shielded and grounded. Operation with non-certified computers or non-shielded cables may result in interference to radio or television reception.

Modifications

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Notice for Canada

This apparatus complies with the Class “B” limits for radio interference as specified in the Canadian Department of Communications Radio Interference Regulations.

Cet appareil est conforme aux normes de CLASSE “B” d'interférence radio tel que spécifié par le Ministère Canadien des Communications dans les règlements d'interférence radio.

Compliance

This product conforms to the following Council Directive:

- ☐ Directive 89/336/EEC, 92/31/EEC (EMC), 73/23/EEC (LVD)

Declaration of Conformity

According to the FCC96 208 and ET95-19,

Manufacturer/Importer's Name: **Creative Labs, Inc.**

Manufacturer/Importer's Address: **1901 McCarthy Boulevard
Milpitas, CA. 95035
United States
Tel: (408) 428-6600**

declares under its sole responsibility that the product

Trade Name: **Creative Labs**

Model Numbers: **PD0020**

has been tested according to the FCC / CISPR22/85 requirement for Class B devices and found compliant with the following standards:

EMI/EMC: ANSI C63.4 1992, FCC Part 15 Subpart B
Complies with Canadian ICES-003 Class B.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesirable operation.

Ce matériel est conforme à la section 15 des règles FCC.

Son Fonctionnement est soumis aux deux conditions suivantes:

1. Le matériel ne peut être source D'interférences et
2. Doit accepter toutes les interférences reçues, Y compris celles pouvant provoquer un fonctionnement indésirable.

**Compliance Manager
Creative Labs, Inc.
6 October, 2000**



Limited Warranty

Creative Technology Ltd. (“Creative”) warrants to the original end-user/purchaser only that the hardware product will be free of defects in materials and workmanship for a period of **ONE** year from the date of purchase. The physical media (whether CD-ROM or diskettes) enclosed herein are also warranted to be free of defects in materials and workmanship for a period of 90 days from the date of purchase, or such other period as may be expressly required by applicable law (“Warranty Period”).

Should there be a material or workmanship defect in the hardware product or accompanying item(s) during the Warranty Period, the end-user purchaser shall obtain a Return Merchandise Authorization (RMA) number from the nearest support center and be responsible for all efforts and costs incurred in transporting/mailing/shipping/insuring the defective hardware or item(s) to and from the support center. A copy of a dated proof of purchase (e.g., a store receipt) should be enclosed in the returned package, with the RMA number clearly indicated on the outside.

Creative’s entire liability and end-user/purchasers sole remedy will be, at Creative’s sole discretion, the repair or replacement (with the same or similar model) of any hardware or accompanying item(s) that does not meet the “Limited Warranty” terms explained above that is returned to Creative or an authorized distributor or dealer during the Warranty Period with a copy of your receipt.

What this warranty does not cover

To the maximum extent permitted by applicable law, Creative disclaims all other warranties, expressed or implied, including the warranties of merchantability or fitness for a particular purpose with respect to the use of this product and the program license granted therein. Creative also disclaims any warranty or obligation to support products for all operating environments — for example, by ensuring interoperability with future versions of operating systems or other future software or hardware. In no event shall Creative or its licensors be liable for any indirect, incidental, special or consequential damages or for any lost profits, lost savings, lost data, personal injury, and so on, arising from or relating to the use of this software or hardware product, even if Creative or its licensors have been advised of the possibility of such damages.

Specifically, this warranty does not cover failures of the product which result from accident, abuse, misuse (including but not limited to improper installation, or connection to incorrect voltages or power points), alterations (by persons other than Creative or its authorized repair agents), moisture, corrosive environments, shipping, high voltage surges, or abnormal working conditions (including but not limited to lightning and water damage) after purchase. In no event will Creative's liability or damages to you, or any other person, ever exceed the purchase price you paid for the product, regardless of the form of the claim.

This warranty does not cover normal wear and tear, or in the case of communications products, the use of the product outside the borders of the country intended for use (as indicated by local telecommunication approval stickers).

Note: This warranty gives you specific legal rights. You may have other rights which vary from country/state to country/state. Certain limitations in this warranty are not permitted by the jurisdiction of some countries/states, so some limitations here may not apply to you.


Copyright © 2000 Creative Technology Ltd. The Creative logo, Sound Blaster, Modem Blaster and Video Blaster are registered trademarks of Creative Technology Ltd. in the United States and/or other countries. All other brand names are either registered trademarks or trademarks and are the property of their respective owners.

Product _____ Serial No. _____

WARNING

The following applies to the usage of Video Blaster MovieMaker/Video Blaster MovieMaker Plus products:

THIS PRODUCT AND THE SOFTWARE CONTAINED WITHIN IT ARE DESIGNED TO ASSIST YOU IN REPRODUCING ONLY MATERIAL IN WHICH YOU OWN THE COPYRIGHT OR FOR WHICH YOU HAVE OBTAINED PERMISSION TO COPY FROM THE COPYRIGHT OWNER. UNLESS YOU OWN THE COPYRIGHT OR HOLD THE PERMISSION TO COPY FROM THE COPYRIGHT OWNER, YOU MAY BE VIOLATING COPYRIGHT LAW AND BE SUBJECT TO PAYMENT OF DAMAGES AND OTHER REMEDIES. IF YOU ARE UNCERTAIN ABOUT YOUR RIGHTS, YOU SHOULD CONTACT YOUR LEGAL ADVISOR. YOU ASSUME FULL RESPONSIBILITY FOR THE LEGAL AND RESPONSIBLE USE OF THE PRODUCT AND THE SOFTWARE.

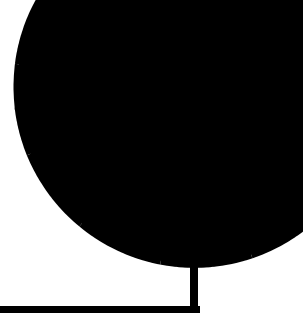

Contents

	Introduction.....	xi
	About the Applications.....	xii
	Video Blaster MovieMaker Control Application.....	xii
	Before You Begin.....	xiii
	System Requirements.....	xiii
	Document Conventions.....	xiv
1	Installing Video Blaster MovieMaker.....	1
	In Your Package.....	1
	About the Video Blaster MovieMaker Hardware.....	2
	Installing Video Blaster MovieMaker.....	3
	Windows 98 and Windows Me.....	3
	Verifying the installation in Windows 98 and Windows Me.....	4
	Windows 2000.....	5
	Verifying the installation in Windows 2000.....	6
2	Connecting To Audio/Video Sources.....	7
	Connecting Video Blaster MovieMaker hardware to video sources.....	8
	Connecting Video Blaster MovieMaker hardware to audio sources.....	9

3	Using The Video Blaster MovieMaker Control.....	10
	Starting the Video Blaster MovieMaker Control application.....	11
	About the Video Blaster MovieMaker Control application.....	12
	Recording an audio/video file	13
	Recording an audio/video file with microphone audio	14
	Playing back a recorded file	15
	Using Create CD Wizard.....	16
	To create a data CD.....	17
	To create a Video CD.....	18
	To Record and Create a Video CD in One Step.....	19
	To record and create a data CD in one-step.....	20
	Adjusting Hardware Settings.....	21
	Adjusting Recording Options.....	21
	Adjusting Video Display Settings	23
	Starting Video Blaster MovieMaker Help	23
A	An MPEG Primer	24
	What is MPEG?	24
	Encoding to MPEG.....	24
B	Technical Specifications	25
	Size.....	25
	Weight.....	25
	Supported video input sources.....	25
	Supported video input types.....	25
	Video capture formats	25
	Supported audio inputs.....	26
	Audio capture format	26
	Supported audio bit rates.....	26
	Audio sampling frequency.....	26

	Audio sampling mode	26
	Power	26
	Port compatibility	26
C	Video Blaster MovieMaker Connectivity Diagram.....	27
D	Troubleshooting.....	28
	Problems indicated by the LED light on the	
	Video Blaster MovieMaker hardware	28
	Problems with video input	29
	Problems with audio input	31
	Problems with copying recorded files to CD	31
E	Note on USB Compatibility	32

Introduction

The Creative Video Blaster MovieMaker is a USB device that allows the real-time encoding of analog audio and video from sources such as camcorders, VCRs, or television. Some of the great things you can do with Video Blaster MovieMaker include:

- ❑ **Video and Movie Archiving.** Use Video Blaster MovieMaker to digitally archive precious home movies that were recorded on fragile video tapes. Once digitally recorded in MPEG format, your home movies will be protected from the wear and tear of repeated viewing.
- ❑ **Convenient Playback.** Combine Video Blaster MovieMaker with a CD-RW drive like the Creative CD-RW Blaster 8432, and you can copy your recorded files direct to CD for convenient and easy play back.
- ❑ **Fast Distribution.** Share your favorite home movie moments with friends or relatives by sending recorded files as e-mail attachments.
- ❑ **Professional Style Editing.** Add a professional touch to your movies with titles, credits, fancy wipes and fades. Combine several video clips into a collection of highlights.

About the Applications

Video Blaster MovieMaker Control Application

Video Blaster MovieMaker Control is an easy-to-use application that works with your Video Blaster MovieMaker Control hardware, allowing you to preview and record MPEG files from your audio/video source. Once recorded, the MPEG files can be easily managed and played back.

Video Blaster MovieMaker Control also gives you the freedom to tweak file settings until you are satisfied with what you have recorded. You can even copy the files direct to CD or send them to friends via e-mail!

Before You Begin

The README file on the CD-ROM contains information not available at the time of printing. Read the file before you continue. In addition, read the following:

- ☐ System Requirements
- ☐ Document Conventions

System Requirements




Minimum system requirements for Video Blaster MovieMaker:

- ☐ IBM® PC or 100% compatible
- ☐ Genuine Intel® Pentium®, Pentium II, Pentium III, AMD-K6-2, or AMD® Athlon™ family processor running at 350 MHz or faster
- ☐ 32MB RAM recommended
- ☐ 100 MB free hard disk space to install the application software
(An additional 2 GB of hard drive storage is recommended for storing videos)
- ☐ CD-ROM drive installed
(CD-R or CD-RW writer recommended for saving recorded video files to CD)
- ☐ DVD player capable of reading CD-R or CD-RW media, required for playing Video CDs
- ☐ Available USB port or self-powered USB hub
- ☐ Display adapter capable of 16-bit color at 800x600
- ☐ Sound Blaster or other Windows compatible sound card
- ☐ Microsoft® Windows® 98, Windows 2000 and Windows Me

Document Conventions

The following typographical conventions are used throughout this document:

Table i: Document conventions

This	Represents
bold	Text that must be entered exactly as it appears.
<i>italic</i>	Title of a book or a placeholder, which represents the information you must provide.
UPPERCASE	Directory name, file name, or acronym.
< >	Symbols, letters, and key names on the keyboard.
	This notepad icon indicates information that is of particular importance and should be considered before continuing.
	This alarm clock icon indicates that failure to adhere to directions may result in loss of data or damage to your system.
	The warning sign indicates that failure to adhere to directions may result in bodily harm or life-threatening situations.

Installing Video Blaster MovieMaker

This chapter tells you how to quickly install the Video Blaster MovieMaker hardware and application.

In Your Package

Your package contains the following items:

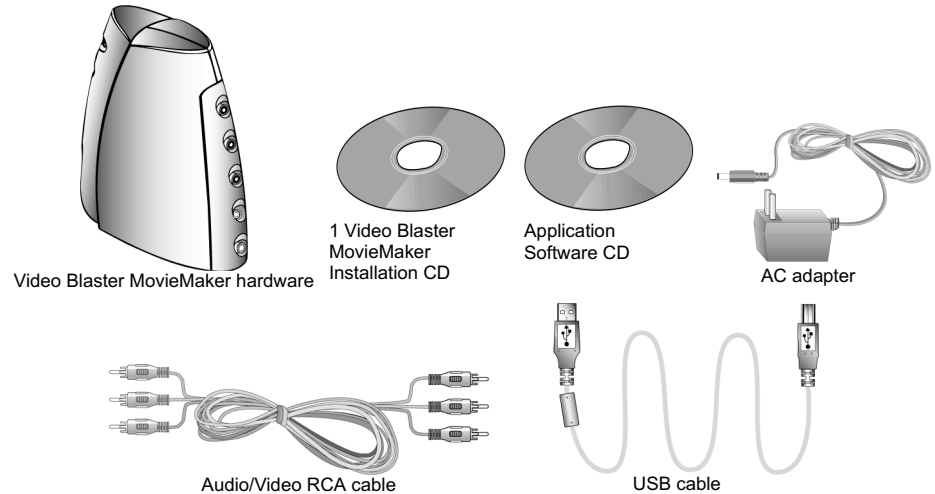


Figure 1-1: Video Blaster MovieMaker package.

About the Video Blaster MovieMaker Hardware

Figure 1-2 shows you the front and back views of the Video Blaster MovieMaker hardware.

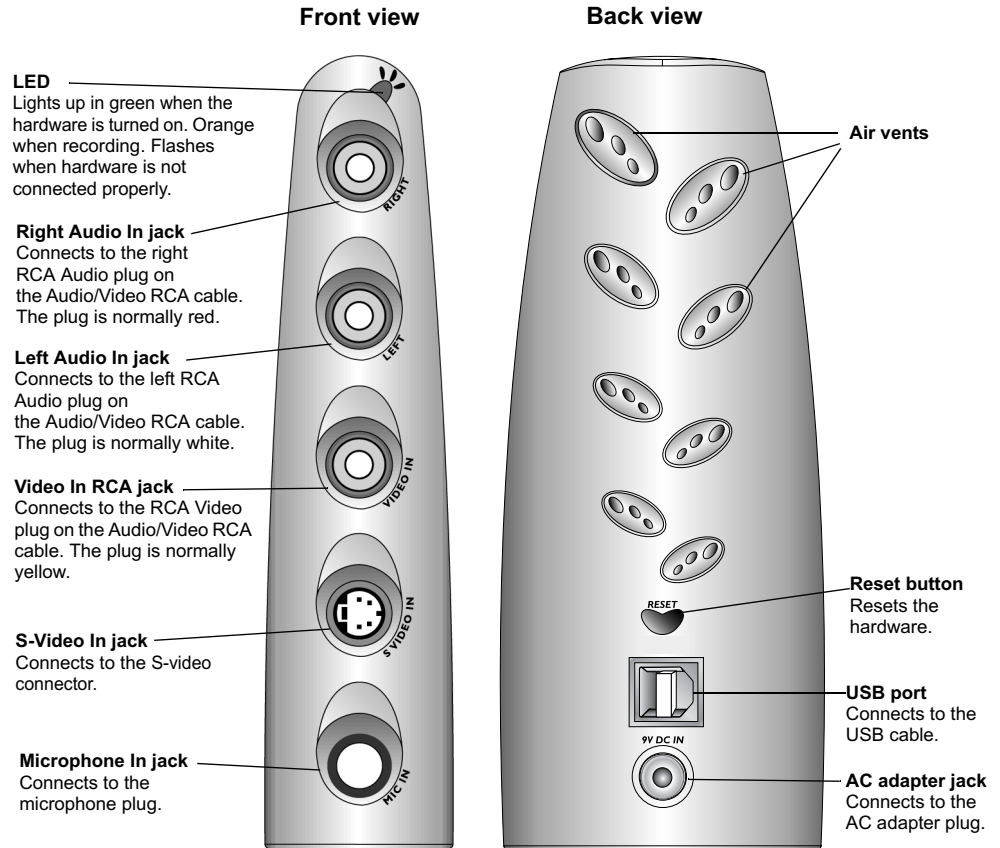


Figure 1-2: Front and back views of the Video Blaster MovieMaker hardware.

Installing Video Blaster MovieMaker

Windows 98 and Windows Me



The Video Blaster MovieMaker hardware should only be operated with the AC adapter supplied.



- If you accidentally begin installation with the Video Blaster MovieMaker hardware connected, the *Add New Hardware Wizard* dialog box appears. Click the *Cancel* button and disconnect Video Blaster MovieMaker from your computer.
- You can connect Video Blaster MovieMaker's USB cable to your computer while the computer is turned on.
- The USB port(s) on your computer may be found on the front panel instead of the back.

Use the appropriate software installation procedures for your computer's operating system. For users of Windows 98 and Windows Me, see "Windows 98 and Windows Me". For users of Windows 2000, see "Windows 2000" on page 1-5.

1. Do not connect the Video Blaster MovieMaker hardware to your computer before installing the drivers.
Insert the Video Blaster MovieMaker CD into your CD-ROM drive.
2. Select the options for installing drivers and applications if they are not already selected.
3. Follow the instructions on the screen to complete the installation.
You may be asked, after an application is installed, if you want to restart your computer. Select *No* until all the drivers and applications are installed.
4. Connect the supplied USB cable and AC adapter as shown in Figure 1-3.

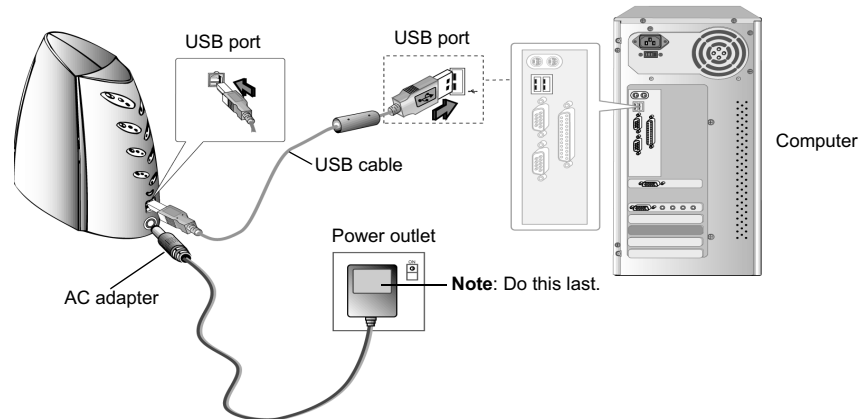


Figure 1-3: Connecting Video Blaster MovieMaker hardware to the computer and power supply.

5. Place the Video Blaster MovieMaker hardware on a flat surface, plug the AC adapter into a power outlet and turn on the outlet. Windows automatically detects the device.
6. Restart your computer.

Verifying the installation in Windows 98 and Windows Me

1. Right-click the *My Computer* icon on your desktop.
2. On the menu that appears, click *Properties*.
3. In the *System Properties* dialog box, click the *Device Manager* tab.
4. Click the plus (+) sign next to the *Sound, video and game controllers* icon.
The entry “*Creative Video Blaster MovieMaker*” should appear. If the entry does not appear, repeat the installation procedure on page 1-3.

Windows 2000



The Video Blaster MovieMaker hardware should only be operated with the AC adapter supplied.



- If you accidentally begin installation with the Video Blaster MovieMaker hardware connected, the **Add New Hardware Wizard** dialog box appears. Click the **Cancel** button and disconnect Video Blaster MovieMaker from your computer.
- You can connect Video Blaster MovieMaker's USB cable to your computer while the computer is turned on.
- The USB port(s) on your computer may be found on the front panel instead of the back.

1. Do not connect the Video Blaster MovieMaker hardware to your computer before installing the drivers. Insert the Video Blaster MovieMaker CD into your CD-ROM drive.

2. Click the options for installing drivers and applications.

The *Digital Signature Not Found* dialog box (Figure 1-4) appears, telling you that an unknown software package has been detected.

3. Click the **Yes** button.
The drivers are copied to your system.

4. Connect the supplied USB cable and AC adapter as shown in Figure 1-3.

5. Place the Video Blaster MovieMaker hardware on a flat surface, plug the AC adapter into a power outlet and turn on the outlet.

The *Digital Signature Not Found* dialog box appears (Figure 1-5) again, telling you that Video Blaster MovieMaker has been detected.

6. Click the **Yes** button to complete installation.



Figure 1-4: *Digital Signature Not Found* dialog box.



Figure 1-5: *Digital Signature Not Found* dialog box.

Verifying the installation in Windows 2000

1. Right-click the *My Computer* icon on your desktop.
2. On the menu that appears, click *Properties*.
3. In the *System Properties* dialog box, click the *Hardware* tab.
4. Click the *Device Manager* button.
5. Click the plus (+) sign next to the *Sound, video and game controllers* icon. The entry “*Creative Video Blaster MovieMaker*” should appear.
If the entry does not appear, repeat the installation procedure on page 1-5.

Connecting To Audio/Video Sources

After installing Video Blaster MovieMaker, you must connect the Video Blaster MovieMaker hardware to an audio/video source in order to begin recording.

This chapter is organized as follows:

- ❑ Connecting Video Blaster MovieMaker hardware to video sources
- ❑ Connecting Video Blaster MovieMaker hardware to audio sources

For a complete Video Blaster MovieMaker hardware connectivity diagram, refer to “Video Blaster MovieMaker Connectivity Diagram” on page C-27.

Connecting Video Blaster MovieMaker hardware to video sources



- Some possible composite or S-video sources include output from a VCR, camcorder, or a DVD/VCD/LD player. Your choice is limited only by whether the video source uses RCA or S-video cables.
- Video Blaster MovieMaker is compatible with PAL and NTSC video sources.
- One composite and one S-video source can be connected to Video Blaster MovieMaker simultaneously. Video Blaster MovieMaker will recognize the video source selected in Hardware Settings. For details, refer to “Adjusting Hardware Settings” on page 3-21.
- To record video with audio, be sure that both video and audio sources are connected to Video Blaster MovieMaker.

To record video, the Video Blaster MovieMaker hardware must be connected to a video source. Video Blaster MovieMaker can be connected to two types of video sources — composite video or Super-video (S-video). Composite video sources are connected to Video Blaster MovieMaker with the provided audio/video RCA cable while S-video sources are connected with S-video cables (not provided).

It is advised to use a shielded S-video cable for S-video sources.

To connect the Video Blaster MovieMaker hardware to a video source:

1. Connect the RCA video plug or S-video connector to the Video In RCA jack or S-video In jack at the front of Video Blaster MovieMaker.
2. Connect the RCA video plug or S-video connector to your video source.
3. Be sure that the video source, the Video Blaster MovieMaker hardware and the computer are properly connected and turned on before you start recording.

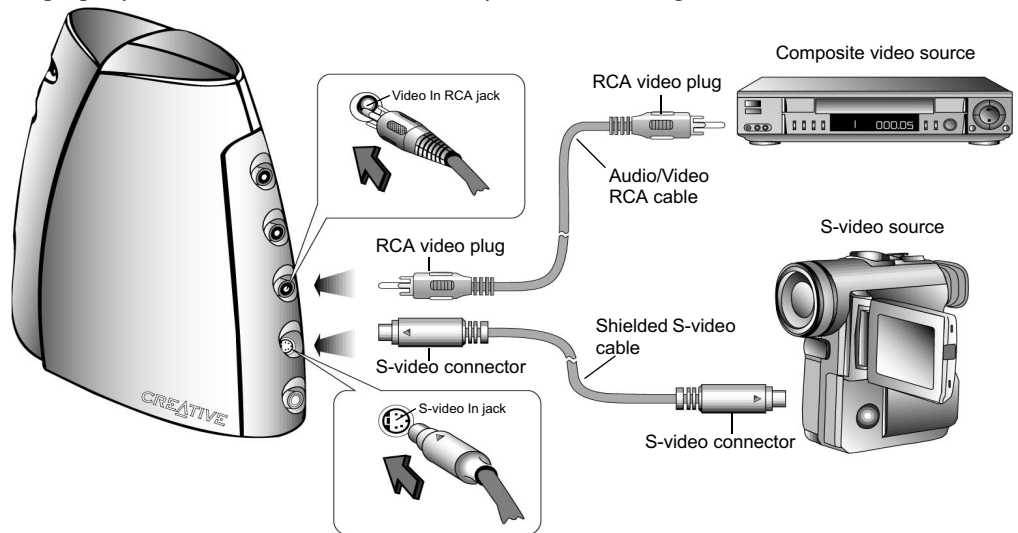


Figure 2-1: Connecting the Video Blaster MovieMaker hardware to a video source.

Connecting Video Blaster MovieMaker hardware to audio sources



- In most instances, your audio source would be the same as your video source. You can, however, use an audio source which is separate from your video source. You can, for example, use a camcorder as the video source and a CD player as the audio source.
- You can use a microphone to add great effects like voice-overs. To configure Video Blaster MovieMaker to use a microphone, refer to “Recording an audio/video file with microphone audio” on page 3-14.
- PC microphones that use mini-plugs must be attached to full-size adapters (not supplied) before use with Video Blaster MovieMaker.

To record video with audio, the Video Blaster MovieMaker hardware must be connected to both an audio and video source.

To connect the Video Blaster MovieMaker hardware to an audio source:

1. Connect the left and right RCA audio plugs to the respective RCA jacks at the front of Video Blaster MovieMaker. If you are using a microphone, connect the microphone plug to the microphone jack at the front of Video Blaster MovieMaker.
2. Connect the left and right RCA audio plugs to your audio source.
If your audio source is the same as your video source, you must connect the left and right RCA audio plugs to your video source, regardless of whether it is a composite or S-video source.
3. Be sure that the audio source, video source, the Video Blaster MovieMaker hardware and the computer are properly connected and turned on before you start recording.

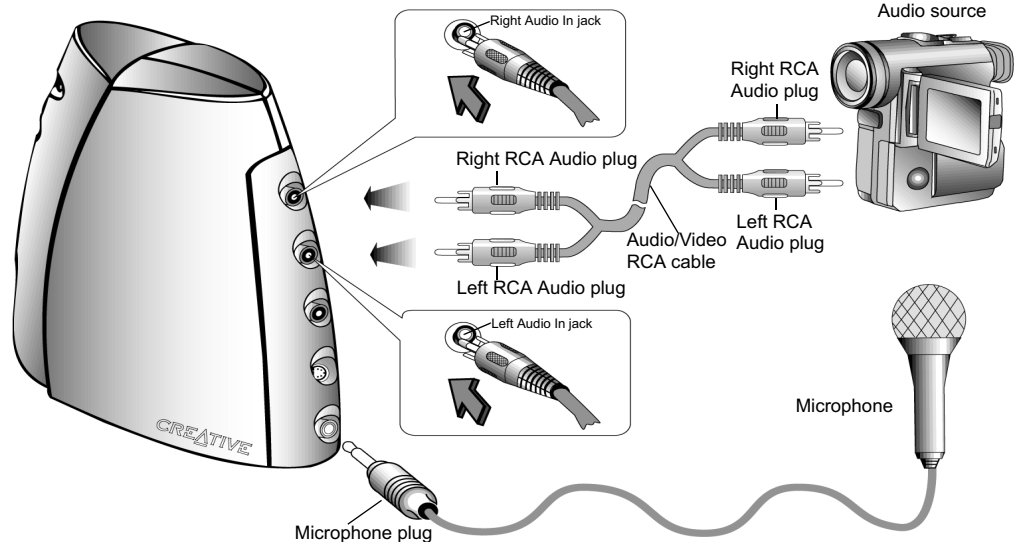


Figure 2-2: Connecting the Video Blaster MovieMaker hardware to an audio source.

Using The Video Blaster MovieMaker Control

The Video Blaster MovieMaker Control application helps you to quickly and easily record, preview and manage recorded audio/video files, and to copy recorded files to CD with the Create CD Wizard.

This chapter provides instructions on how to use the Video Blaster MovieMaker Control application, including:

- ☐ Starting the Video Blaster MovieMaker Control application
- ☐ About the Video Blaster MovieMaker Control application
- ☐ Recording an audio/video file
- ☐ Recording an audio/video file with microphone audio
- ☐ Playing back a recorded file
- ☐ Using Create CD Wizard
- ☐ Adjusting Hardware Settings
- ☐ Adjusting Recording Options
- ☐ Adjusting Video Display Settings
- ☐ Starting Video Blaster MovieMaker Help

Starting the Video Blaster MovieMaker Control application

1. Click *Start*, select *Programs*, select *Creative*, select *Video Blaster MovieMaker* and click on *Video Blaster MovieMaker*.
2. When the Video Blaster MovieMaker Control application is started for the first time, the Video Blaster MovieMaker Control Settings window appears, prompting you to configure hardware and recording settings.
Select the options that best match your hardware and recording needs and click the *OK* button.

If you do not want to select the hardware and recording settings during the first start up, click the *Cancel* button.

For details on changing hardware and recording settings later, refer to “Adjusting Hardware Settings” on page 3-21 and “Adjusting Recording Options” on page 3-21.

About the Video Blaster MovieMaker Control application



To find out what each button does, move your cursor over the button in the Video Blaster MovieMaker Control window and a short description will appear.

After selecting the appropriate settings, the Video Blaster MovieMaker Control window shown in Figure 3-1 appears, displaying the current video input.



Figure 3-1: Video Blaster MovieMaker window.

The sections that follow describe the more commonly used Video Blaster MovieMaker operations. For more information on how to use Video Blaster MovieMaker Control, see “Starting Video Blaster MovieMaker Help” on page 3-23.

Recording an audio/video file



- The LED light on the Video Blaster MovieMaker hardware glows orange during recording.
- For best results, start recording just before the video you want to record appears on the Video Preview screen.
- To automatically stop recording after a specified time period, use the Limit Recording Time feature. For details on using this and other Recording Options, refer to “Adjusting Recording Options” on page 3-21.
- For details on tweaking display settings, refer to “Adjusting Video Display Settings” on page 3-23.
- For details on using your audio/video sources, refer to the product’s manual.

1. Start the audio/video input on your audio/video source(s).
The current video input will be displayed on the Video Preview screen.
2. Click the *Record* button in the Video Blaster MovieMaker Control window to start recording.
3. Click the *Stop* button to stop recording.

Recording an audio/video file with microphone audio



- To record video with only audio input from your microphone, disconnect other audio sources from the Video Blaster MovieMaker hardware.
- If you experience noise from your speakers when using a microphone, reduce speaker volume or move the microphone away from your speakers.
- For details on adjusting Hardware Settings, refer to “Adjusting Hardware Settings” on page 3-21

In addition to audio input from your audio source, voice-overs can be recorded by using a microphone.

Before recording, be sure that the microphone is properly connected to the Video Blaster MovieMaker hardware and is turned on.

To record an audio/video file with microphone audio:

1. In the Video Blaster MovieMaker Control window, click the *Settings* button.
2. In the *Hardware Settings* tabbed page, in the *Microphone Input* section, click *Auto-detect* (Figure 3-2).
3. Click the *OK* button.
4. Start the audio/video input from your audio/video source(s).
The current video input is displayed on the Video Preview screen.
5. In the Video Blaster MovieMaker Control window, click the *Record* button to start recording.
6. Click the *Stop* button to stop recording.

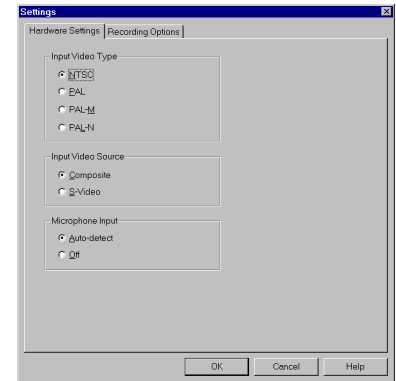


Figure 3-2: **Hardware Settings** tabbed page of **Settings Window**.

Playing back a recorded file



- To improve your viewing experience, maximize the preview screen.
- Use the volume control slider to adjust play back volume.

With the Video Blaster MovieMaker Control application, you can quickly play back recorded files on the Video Preview screen.

To play back a recorded file:

In the Video Blaster MovieMaker Control window, double-click the file description or thumbnail of the recorded file you want to play back.

Alternatively, if a file is already selected, click the *Play* button in the Video Blaster MovieMaker Control window.

Using Create CD Wizard



- A data CD can contain MPEG-1, MPEG-2 or Video CD files. Files on data CDs are only playable on computers.
- A Video CD contains only Video CD files. Files on Video CDs are playable on both computers and DVD/Video CD players.
- Some CD-R or CD-RW media may not be compatible with certain DVD/Video CD players. Check with your distributor on your player's compatibility.

Creating data and Video CDs is fast and simple with the Create CD Wizard included in the Video Blaster MovieMaker Control application.

Read the following sections on how to use Create CD Wizard:

- ☐ To create a data CD
- ☐ To create a Video CD
- ☐ To record and create a Video CD in one step
- ☐ To record and create a data CD in one step

The first two options, *To create a data CD* and *To create a Video CD*, will burn a CD from a file already recorded. Whilst the options *To record and create a Video CD in one step* or *To record and create a data CD in one step*, will enable the Video Blaster MovieMaker to directly import live video and record it simultaneously to a CD.

To create a data CD



- To create a data CD, your audio/video files must be recorded in MPEG-1 or MPEG-2 format.
For details on recording files in MPEG-1 or MPEG-2, refer to “Adjusting Recording Options” on page 3-21.
- Audio/video files not recorded with Video Blaster MovieMaker can also be copied to a data CD with Create CD Wizard.

1. In the Video Blaster MovieMaker Control window, click the *Details* button.
2. In the *Details* view of the Video Blaster MovieMaker Control window, select the check boxes of the files to copy to CD.
3. Click the *Create CD* button.
The *Create CD* dialog box appears.
4. In the *Select an Option* section (Figure 3-3), click *Create a data CD*.
5. Click the *CD writer drive* box and click from the list the CD writer to use.
Note: Only CD writers installed in your system will be listed.
6. In the *CD title* box, type a title for the CD.
Leave the box blank if you do not want a title.
7. Click the *CD writing speed* box and click from the list the speed at which you want files to be copied to the CD.
Note: Select a speed which is compatible with your CD writer and CD media.
8. Place a usable CD-R or CD-RW in your CD writer.
9. Click the *Next* button.
10. To copy additional files to the CD:
 - i. In the *Create a Data CD* dialog box (Figure 3-4) that appears, click the *Add* button.
 - ii. In the window, select the additional files to copy to the CD.
 - iii. Click the *Add* button.**Note:** Skip this step if you do not have additional files to copy to the CD.
11. Click the *Start* button.

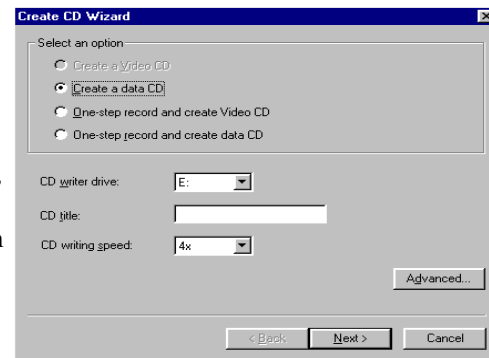


Figure 3-3: *Create CD Wizard* dialog box.

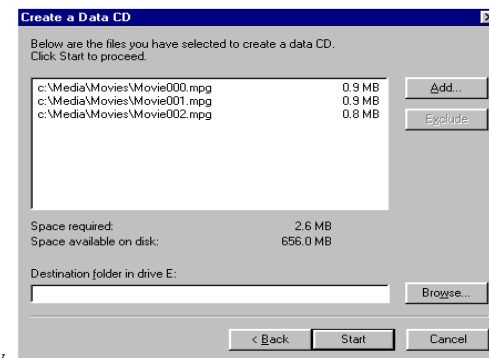


Figure 3-4: *Create Data CD* dialog box.

To create a Video CD



- To create a Video CD, your audio/video files must be recorded in the Video CD format. For details on recording Video CD files, refer to “Adjusting Recording Options” on page 3-21.
- Video CD files not recorded with Video Blaster MovieMaker can also be copied to Video CD with Create CD Wizard.

1. Follow steps 1 through 9 in the section above.

Note: For step 4, click *Create a Video CD* instead.

2. To copy additional Video CD files to the CD:

- i. In the *Create a Video CD* dialog box (Figure 3-5) that appears, click the *Add* button.
- ii. In the window, select the additional Video CD files to copy to the CD.
- iii. Click the *Add* button.

Note: Skip this step if you do not have additional files to copy to the CD.

3. To rearrange the order in which the Video CD files will be copied to the CD, select the file, then click the *Up/Down* buttons in the *Create a Video CD* dialog box.

Note: Skip this step if you do not want to rearrange file order.

4. Click the *Start* button.

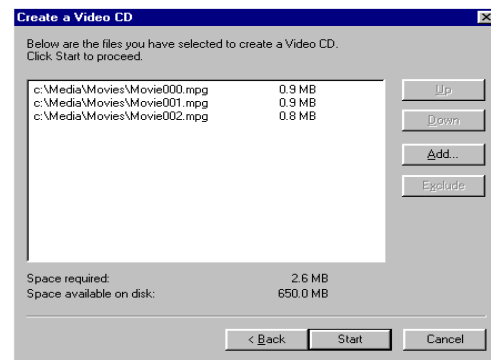


Figure 3-5: *Create Video a CD* dialog box.

To Record and Create a Video CD in One Step



When using the one-step record option the Video Blaster MovieMaker should be connected to the computer and switched on. The video source (camcorder, VCR, etc.) should also be switched on and ready to go.

1. In the Video Blaster MovieMaker Control window, click the *Create CD* button. The *Create CD Wizard* dialog box appears.

2. In the *Select an Option* section (Figure 3-6), click *One-step record and create Video CD*.

3. Click the *CD writer drive* box and click from the list the CD writer to use.

Note: Only CD writers installed in your system will be listed.

4. In the *CD title* box, type a title for the CD. Leave the box blank if you do not want a title.

5. Click the *CD writing speed* box and click from the list the speed at which you want the files to be copied to CD.

Note: Select a speed which is compatible with your CD writer and CD media.

6. Place a usable CD-R or CD-RW in your CD writer.

7. Click the *Next* button.

8. The *One-step Record and Create Video CD* dialog box (Figure 3-7) appears. In the *Video recording duration* box, type or select the time you want to limit recording to.

9. Click the *Start* button.

After recording, the Create CD Wizard will automatically copy the file(s) to your CD.



Figure 3-6: *Create CD Wizard* dialog box.



Figure 3-7: *One-step Record and Create Video CD* dialog box.

To record and create a data CD in one-step

1. Follow steps 1 through 7 in the section above.

Note: For step 2, click ***One-step record and create data CD*** instead.

2. The *One-step Record and Create Data CD* dialog box (Figure 3-8) appears. In the *Output file name* box, type the location where the file will be copied to. Alternatively, click the *Browse* button and locate where your files will be copied to.
3. To select a output video file type, click the *MPEG-1* or *MPEG-2* options.
4. Click the *Start* button.
After recording, the Create CD Wizard will automatically copy the file(s) to your CD.

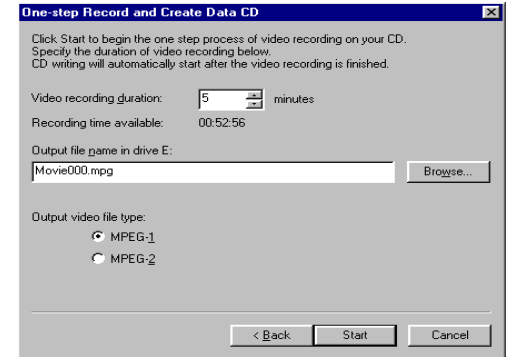


Figure 3-8: *One-step Record and Create Data CD* dialog box.

Adjusting Hardware Settings



If you are not sure whether your video source uses the NTSC or PAL standard, check your video source's manual. Only these standards are compatible with Video Blaster MovieMaker.

When the Video Blaster MovieMaker Control application is launched for the first time, you will be prompted to configure Hardware Settings to match your video source. If you decide to change your video source after this, Video Blaster MovieMaker Hardware Settings must be changed to match the new video source.

To adjust MovieMaker Hardware Settings:

1. After connecting the video source to Video Blaster MovieMaker, start the Video Blaster MovieMaker Control application.
2. In the Video Blaster MovieMaker Control window, click the *Settings* button.
3. On the *Hardware Settings* tabbed page (see Figure 3-9), do one of the following:
 - To select an Input Video Type, click *NTSC*, *PAL*, *PAL-M* or *PAL-N*.
 - To select an Input Video Source, click *Composite* or *S-video*.
 - To select Microphone input options, click *Auto-detect* or *Off*.
4. Click the *OK* button.

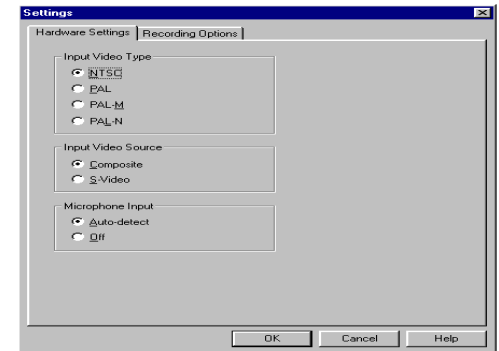


Figure 3-9: **Hardware Settings** tabbed page of **Settings Window**.

Adjusting Recording Options

When the Video Blaster MovieMaker Control application is launched for the first time, you will be prompted to configure Recording Option settings. If you decide to change Recording Options after this, you can do so before or after recording. Settings cannot be adjusted during the recording process.

The following Recording Options can be adjusted:

- ❑ The location of recorded audio/video files

- ☐ Recording time
- ☐ Video file type (MPEG-1, MPEG-2 or Video CD)
- ☐ Video output quality
- ☐ Audio output quality

To adjust these options:

1. In the Video Blaster MovieMaker Control window, click the *Settings* button.
2. Click the *Recording Options* tab (Figure 3-10).
3. Do one of the following:

- To specify a storage location for your recorded files, type the location in the *Output Location* box or click the *Browse* button and select a location from the list.
- To limit recording time, click the *Limit Recording Time* check box to select it and type or select the time limit you want in the box next to it.
- To change video file type, click *MPEG-1*, *MPEG-2* or *Video CD* in the *Output Video File Type* section.
- To change video quality, drag the *Output video quality* slider left to decrease or right to increase.
- To change audio quality, drag the *Output audio quality* slider left to decrease or right to increase.

4. Click the **OK** button.

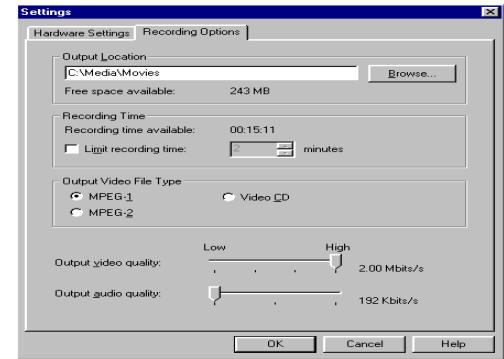


Figure 3-10: *Recording Options* tabbed page of *Settings* Window.

Adjusting Video Display Settings



Display Settings can only be adjusted when previewing or recording video. Display Settings cannot be changed when recorded files are played back. Adjustments made *during* the encoding process are reflected in the recorded video from the point you make the adjustments.

With the application's Video Display Settings, you can adjust brightness, contrast, saturation and sharpness levels in your video files.

There is also a default display setting which has been optimized for video encoding. There may be a delay of 2 or 3 seconds following the adjustment of Video Display Settings for the new setting to take effect. The changes will be reflected on the Video Preview screen. Use the preview screen to estimate the levels required for video encoding.


To adjust display settings:

In the Video Blaster MovieMaker window, drag the *Brightness*, *Contrast*, *Saturation* or *Sharpness* slider left to decrease or right to increase.

To set Display Settings back to the default level, click the *Default* button.

Starting Video Blaster MovieMaker Help

To start Video Blaster MovieMaker Help:

Click the *Help*  button in the Video Blaster MovieMaker window, or click *Start*, select *Programs*, select *Creative*, select *Video Blaster MovieMaker* and click on *Video Blaster MovieMaker Help*.

An MPEG Primer

What is MPEG?

MPEG is the acronym for Moving Picture Expert Group, which proposes standards for audio/video compression.

Audio/video must be compressed to avoid the large files which can result from audio/video encoding.

The standards developed by MPEG include MPEG-1 and MPEG-2.

MPEG-1 was developed for storing and retrieving audio/video information from CD-ROMs at a bandwidth of about 1.5 Mbits/s.

MPEG-2 was developed for television broadcasting and defines a higher bandwidth of up to 4 Mbits/s.

Given the higher bandwidth, audio/video files encoded in MPEG-2 are superior in quality to MPEG-1 files. MPEG-2 files do however take up more space.

MovieMaker allows you to compress audio/video as MPEG-1, MPEG-2 or Video CD files. Video CD is a subset of MPEG-1.

Encoding to MPEG

Encoding to MPEG is known as *quality lossy compression* as some data is lost during compression. Although data is greatly compressed, the resulting MPEG files do not suffer much loss in quality. Quality loss depends on the sampling rate and bit rate of the output. The higher the sampling and bit rate output rates, the better the quality.

The quality and size of MPEG files are, however, directly related — the better the quality, the larger the file size.

High quality MPEG files therefore need more data storage and memory.

Technical Specifications

Size	<input type="checkbox"/> 15" x 17.5" x 9.5"
Weight	<input type="checkbox"/> 14 oz.
Supported video input sources	<input type="checkbox"/> Composite <input type="checkbox"/> S-Video
Supported video input types	<input type="checkbox"/> PAL <input type="checkbox"/> NTSC
Video capture formats	<input type="checkbox"/> MPEG-1 <ul style="list-style-type: none">• 352 x 240 resolution• Minimum video output quality 0.5 Mbits/s; maximum 2 Mbits/s• 30 fps <input type="checkbox"/> MPEG-2 <ul style="list-style-type: none">• 352 x 480 resolution• Minimum video output quality 1 Mbit/s; maximum 6 Mbits/s• 30 fps <input type="checkbox"/> Video CD

- 352 x 240 resolution
- Video output quality 1.15 Mbits/s

Supported audio inputs

- ☐ Stereo line-in
 - 2 RCA
 - Stereo mini-jack
- ☐ Microphone

Audio capture format

- ☐ MPEG-1 Layer 2

Supported audio bit rates

- ☐ MPEG-1
 - Minimum audio bit rate 192 bits/s; maximum 224 bits/s
- ☐ MPEG-2
 - Minimum audio bit rate 192 bits/s; maximum 224 bits/s
- ☐ Video CD
 - 224 bit/s

Audio sampling frequency

- ☐ 44.1 KHz

Audio sampling mode

- ☐ Stereo


Power

- ☐ 100V/220V/9V DC 1A
- ☐ USB port or self-powered USB hub (powered by an external power source)

Port compatibility

- ☐ Universal Serial Bus port

Video Blaster MovieMaker Connectivity Diagram

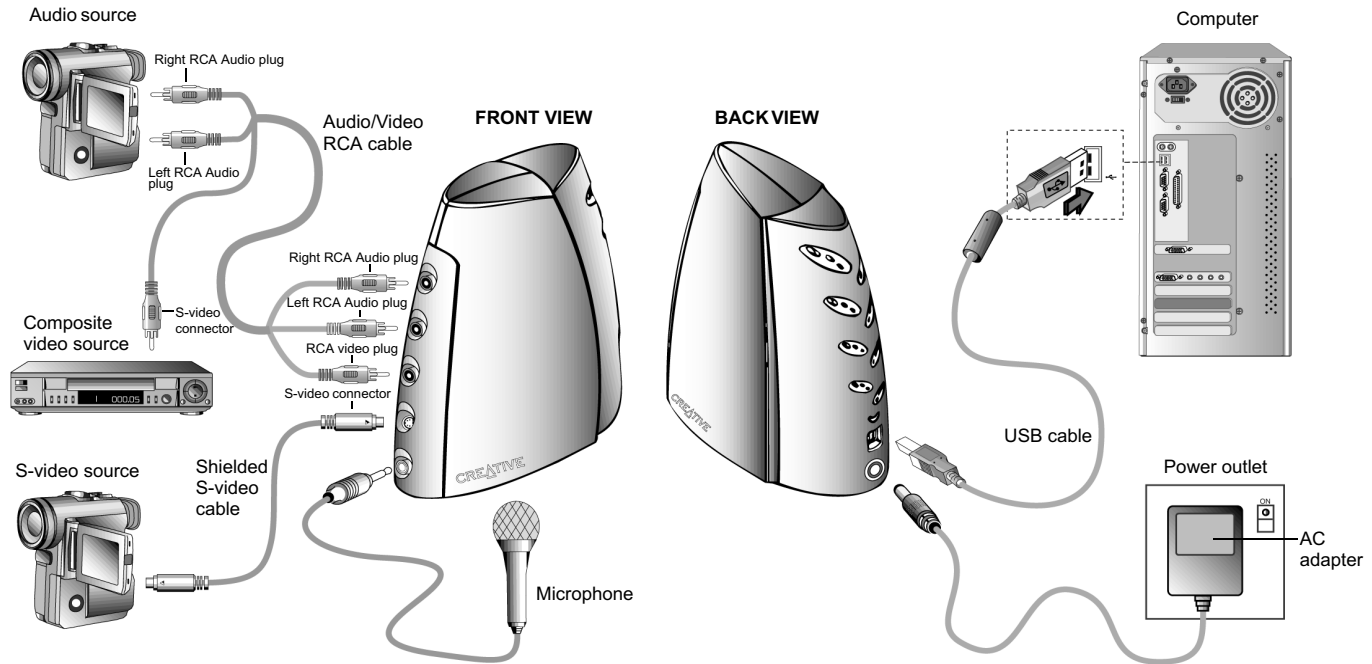

Troubleshooting

Problems indicated by the LED light on the Video Blaster MovieMaker hardware

The LED light on Video Blaster MovieMaker does not light up.

- Cause** The AC power adapter that supplies power to Video Blaster MovieMaker is not turned on or properly connected.
- Solution** Make sure that the AC power adapter is turned on and properly secured to Video Blaster MovieMaker.

The LED light on Video Blaster MovieMaker flashes in red and green.

- Cause** The USB connection between Video Blaster MovieMaker and your computer is not secure. Alternatively, Video Blaster MovieMaker drivers may not have been installed or cannot be loaded properly.
- Solution** Do one of the following:
- ☐ Make sure that the USB connection between Video Blaster MovieMaker and your computer is properly secured.
 - ☐ If the red and green flashing happens just after the Video Blaster MovieMaker application has been installed, try re-installing the drivers.

After the Video Blaster MovieMaker application is shut down, the LED light on Video Blaster MovieMaker turns red. The application stalls when launched again.

Cause The Video Blaster MovieMaker hardware did not register the signal to shut down.

Solution Do the following:

1. Press the reset button once.
2. If the LED light turns green, restart the application.
If the LED light starts flashing, press the reset button again and restart your computer.

Problems with video input

During recording, video input displayed on the preview screen appears jerky.

Cause Your computer does not have enough bandwidth to write recorded data to hard disk.

Solution Do the following:

1. Click *Start*, select *Settings* and click on *Control Panel*.
2. Double-click the *System* icon.
3. In the *System Properties* dialog box, click the *Device Manager* tab.
4. Double-click the *Disk drives* icon.
5. Double-click the *Generic IDE Disk Type* icon.
6. Click the *Settings* tab.
7. Click the *DMA* option.
8. Click the *OK* button.
9. Before attempting to record again, quit all other applications (including screen-savers).

When the Video Blaster MovieMaker application is launched, video input is not displayed in the Video Preview screen.

A message appears stating that there is no video input.

Cause Your video source may not be turned on or properly connected to Video Blaster MovieMaker. Alternatively, Hardware Settings may not have been correctly configured to match your video source.

Solution Do the following:

1. Make sure that the video source is turned on and properly secured to Video Blaster MovieMaker.
2. Check that Video Blaster MovieMaker's Hardware Settings are properly configured.

When the Video Blaster MovieMaker application is launched, video input is not displayed in the Video Preview screen. A message appears in the Video Preview screen stating "MovieMaker hardware is off".

Cause The AC power adapter that supplies power to Video Blaster MovieMaker is not turned on or properly connected.
Alternatively, the USB connection between Video Blaster MovieMaker and your computer is not secure.

Solution Do the following:

1. Make sure that the AC power adapter is turned on and properly secured to Video Blaster MovieMaker.
2. Make sure that the USB connection between Video Blaster MovieMaker and your computer is properly secured.

Problems with audio input

There is no audio input from the microphone.

Cause The microphone is not properly connected to Video Blaster MovieMaker or Hardware Settings have not been properly configured to detect microphone input.

Solution Do the following:

1. Make sure that the microphone is properly connected to Video Blaster MovieMaker.
2. Follow steps 1 through 5 of “Recording an audio/video file with microphone audio” on page 3-14

Audio from your audio source is in mono or appears to come from only one channel.

Cause The audio cable from the audio source may only have one mono-plug instead of the two plug RCA audio cables.
Using this type of audio cable results in mono sound or sound which appears to come from only one channel.


Solution Do the following:

1. Fit a mono-to-stereo adapter (not provided) on the mono-plug. This adapter will split the mono-plug into two regular RCA stereo plugs.
2. Connect the RCA stereo plugs to Video Blaster MovieMaker as described in “Connecting Video Blaster MovieMaker hardware to audio sources” on page 2-9

Problems with copying recorded files to CD

Refer to the Video Blaster MovieMaker application’s Help file.

To start Video Blaster MovieMaker Help:

Click the *Help*  button in the Video Blaster MovieMaker window, or click *Start*, select *Programs*, select *Creative*, select *Video Blaster MovieMaker* and click on *Video Blaster MovieMaker Help*.

Note on USB Compatibility

A small number of motherboards have USB ports that do not meet the USB specification exactly. Unfortunately, Video Blaster MovieMaker *may* not operate correctly with these systems.

Some manufacturers of non-USB-compliant motherboards have released motherboard or BIOS updates to address the problem.

If Video Blaster MovieMaker does not work on your system and you suspect that the problem may be related to your PC's USB port, the following is a list of available options:

1. Contact your PC vendor.
Your PC vendor may be able to upgrade your motherboard or its BIOS to a newer version that addresses USB incompatibilities.
2. Use a PCI host adapter which provides USB connectors.
If you are not able to upgrade your motherboard or its BIOS, we recommend this approach.
3. Attach Video Blaster MovieMaker to a self-powered USB hub.
Some USB devices (such as monitors) also operate as self-powered USB hubs; you can also buy dedicated powered USB hubs that are to be attached to your PC's USB port. However, in some cases, attaching a powered USB hub to a non-USB-compliant USB motherboard connector will not solve the problem.

To look for a USB compatible product, you can visit the product search page at the official USB web site: <http://www.usb.org/app/search/products>.